



Assembling a 10966/10967 Wall Mounted Tire Inflator



Step 1. Begin with unit powered off.




Step 2. Remove 1/4" outlet plug.



Step 3. Apply teflon tape to both ends of 1.8 m 1/2 outlet hose.



Step 3. Connect 1/2" outlet hose assembly directly to inflator air outlet.

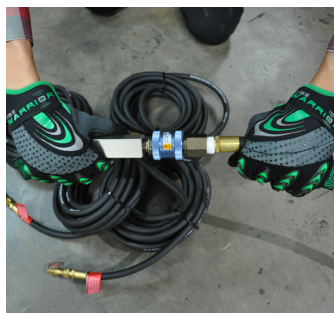

Step 4. Connect the other end of outlet hose to the air pressure release valve.



Completed 4-hose manifold assembly.

Operating Air Pressure Release Valve



START Air Pressure Release Valve **STOP**

Slide the release valve open towards outlet hose to begin inflation. Once the required pre-set pressure has been achieved, slide the valve sleeve to the closed position between inflation before continuing use.

Slide the pressure release valve sleeve towards manifold when the required pressure has been achieved.

Equipment Supply Company

15270 Flight Path Drive Brooksville, FL 34604

352-754-1117 • Fax 352-754-4508

www.esco.net • sales@esco.net